





## Installation Guide

© 2013 Peplink | Pepwave. All Rights Reserved.

Please follow the assembling instructions for the kits relevant to your devices.

## DC Power Connector

### In the Kit

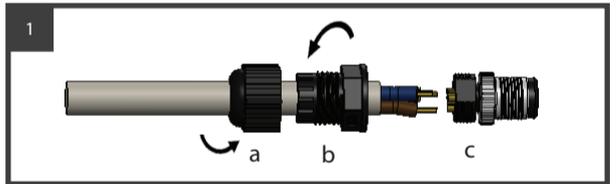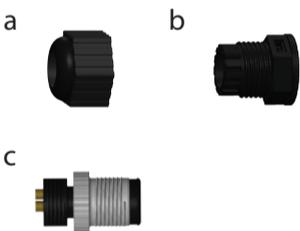




### You have to prepare

DC Power




## AC Power Connector

### In the Kit

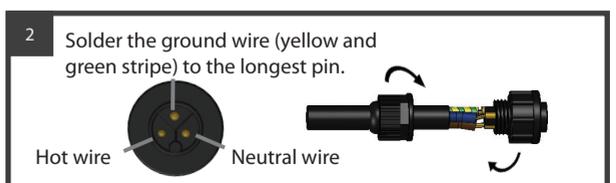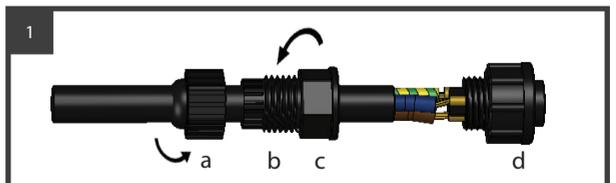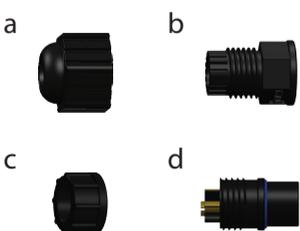





### You have to prepare

AC Power

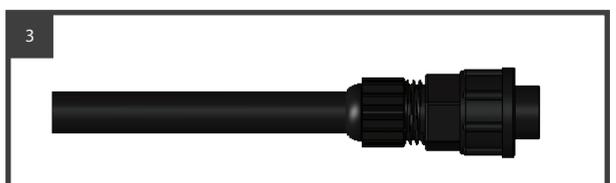

# Metal Ethernet Connector

## In the Kit

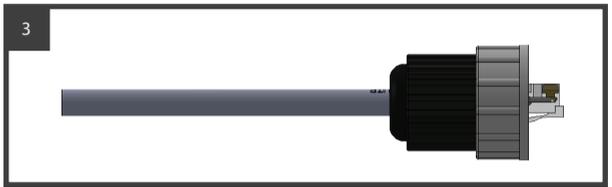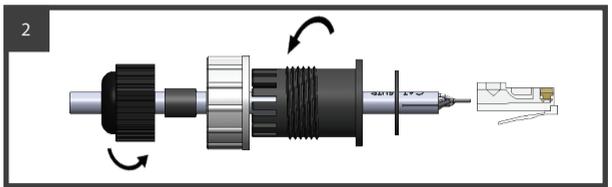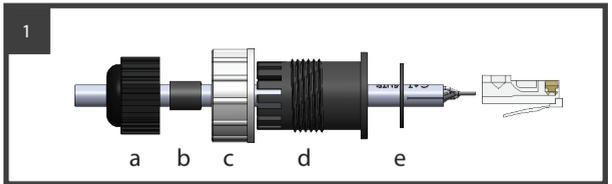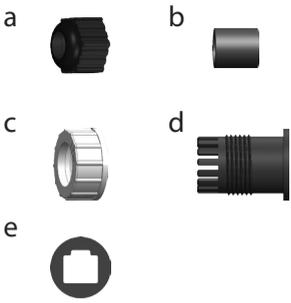

## You have to prepare

Ethernet Cable







Ethernet Plug



# Plastic Ethernet Connector

## In the Kit

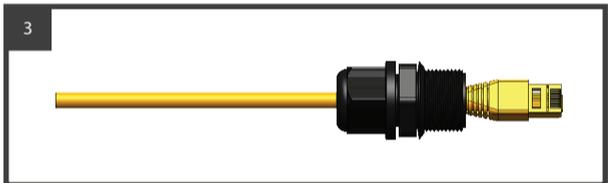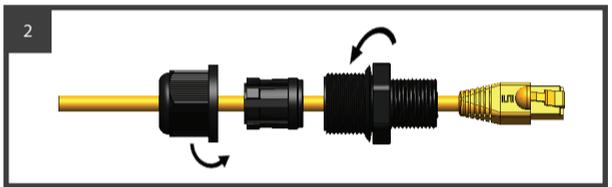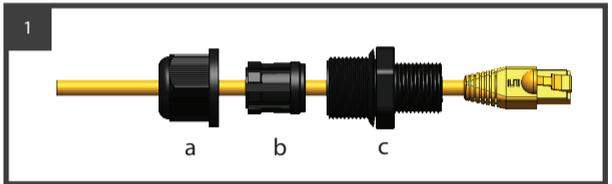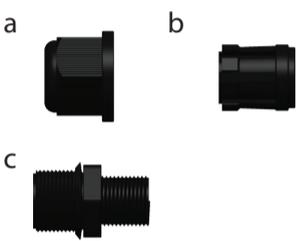





## You have to prepare

Ethernet Cable



# Fiber Connector

## In the Kit

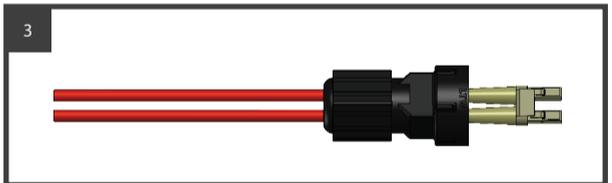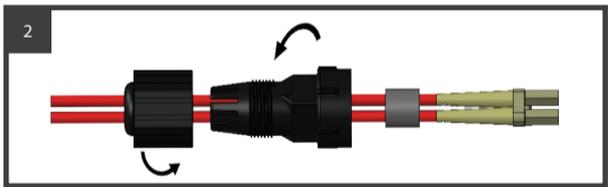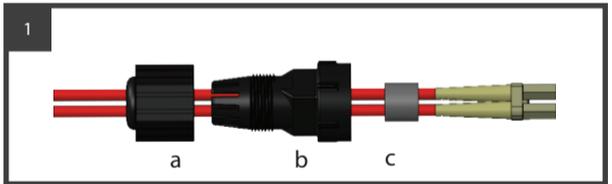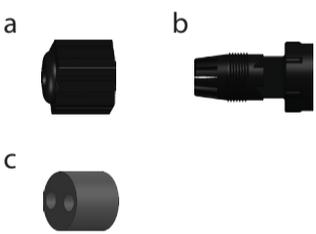


## You have to prepare

Fiber Cable




# Installation

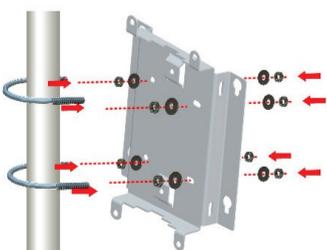

## A. Attach Mounting Unit to Pole

1. Fix the mounting unit to the pole.
2. With the pole in between, attach the two semicircular pole connectors to the mounting unit.
3. Place a washer in between the nut and mounting unit surface on each side of the mounting unit.
4. Tighten the nut on each side.

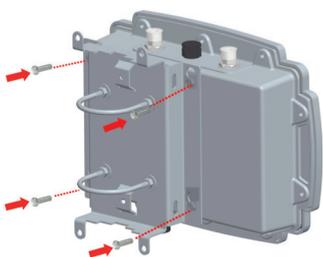

## B. Connect Device and Mounting Unit

1. Fix the device to the mounting unit.
2. Align the holes on the lips of the mounting unit with the holes on the back of your device.
3. Placing a washer in between each screw and hole on the mounting unit.
4. Tighten the screw into the back of your device.